

Windows with built-in blinds – General Guidelines

- Units with built-in blinds must be treated with the utmost care through all processes so that the product is not damaged.
- The most critical phases are mentioned below, and it is important that everyone who works with built-in blinds in these phases is aware of the guidelines and acts in accordance with them.
- Failure to follow the guidelines below may void the warranty on the blind.
- Original Screenline control components must be used for the blinds. For the optimal user experience, it is recommended to use 3 wire control system - ST3134 KNX or ST2134 LAN control units.
- Units with motorized blinds have been function tested and passed before leaving the factory.
- Controllers and other accessories are not supplied by Idealcombi.

<p>Reception</p>	<ul style="list-style-type: none"> • The risk for the goods passes to the buyer upon unloading, and therefore the buyer has a duty to check delivered goods for damage upon receipt in accordance with DVV. • Report of breakage as well as other errors and omissions. must be done on the website www.idealcombi.dk during customer service no later than 3 days after delivery AND before the elements are removed from the pallet. • No later than 8 hours after delivery, the blinds must be lowered completely and the slats must be in a horizontal position. The blinds must be placed in this position for at least 30 days and may only be raised for short periods in connection with any transport of the unit.
<p>Transport</p>	<ul style="list-style-type: none"> • Windows with blinds must be transported upright (as when installed) AND the blinds must be all the way up in the open position. • When delivered from the factory, the units can be placed horizontally, the unit must therefore be raised to a vertical position, the blinds are to be lowered and turned so that the slats do not touch each other, no later than 8 hours after delivery. REMEMBER that the blinds may only be operated when the unit is in an upright position (as when being installed).

Storage	<ul style="list-style-type: none"> • Windows with built-in blinds must be stored dry and sun-shielded. • During the entire construction period, the power connection point and the possible enclosed operating components are protected against impact, water, construction dirt, solvents, other chemicals and sharp objects. • Windows with a built-in blind window must ALWAYS be stored with the blind down completely and the slats set in a horizontal position so that the slats do not touch each other.
Installation	<ul style="list-style-type: none"> • It is recommended that all cables supplied from Idealcombi be routed in "empty pipes". • The units must be assembled according to Idealcombi's instructions (as units without blinds).
(Motorized blinds)	<ul style="list-style-type: none"> • Power supply, power connection and motor control must be installed and tested by an authorized installer.
Note	<ul style="list-style-type: none"> • Window blinds may only be operated when the units are in the vertical position (as during installation) and the unit is in the closed position. • Blinds with cord operation must not be installed in environments with high humidity, as the moisture in this model can penetrate the function control and damage the product.
Warranty	<ul style="list-style-type: none"> • See Idealcombi's general warranty terms. When purchasing an extended warranty, this is stated on the order.

Version 1.0 (2021-06-14)